## **Alert-it Alarm Message Responses**

Name of user Alarm:

URGENT = Life critical alarm: Attend immediately

**HELP** = Comfort critical alarm: Attend with speed

**ASSIST=** Non critical alarm

**FAULT=** Equipment needs servicing

**Special Fault Alarms** 

RF FAIL: Correct immediately as radio contact has been lost with the user's equipment

FAULT30: The user's battery needs charging or replacing, when convenient

FAULT31: The user's battery is almost exhausted and needs charging re replacing immediately


## Action:

1. The pager sound can be muted by pressing



2. Attend the user.

3. Reset the alarm on the user's equipment (see examples below)

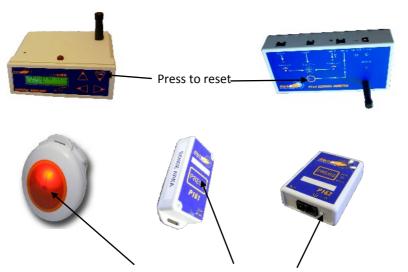

Press for 1 second until LED stops flashing (and beep heard on some units)



Full adjustment details are found in handbooks available on: www.alert-it.co.uk/handbooks/

Or by phoning Alert-it

## **Basic User Pager Information**

